



## Install:

1. Ensure fork casting area is clean and clear of debris.
2. With a 3mm hex wrench, lightly snug all three bolts to casting and then back out 2-3 turns.
3. Install fender over bolts and then apply downward pressure to click in to place. (there should be an audible click)
4. Torque bolts to 2Nm.

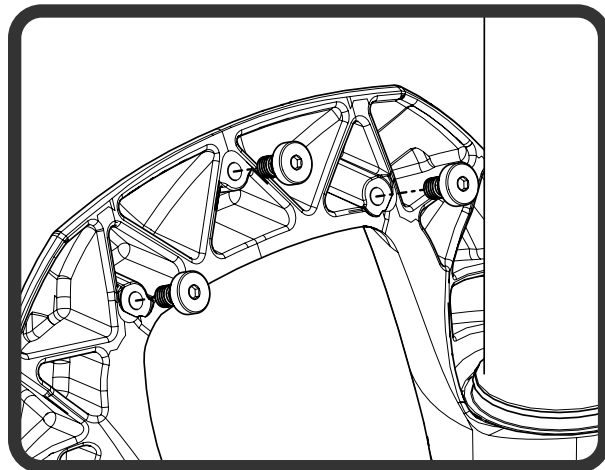

## To Remove:

1. Back bolts out 2-3 turns.
2. Remove fender by lifting up from the tab on the mounting surface and then out.
3. Bolts can remain in casting if desired. Torque to 2Nm max.

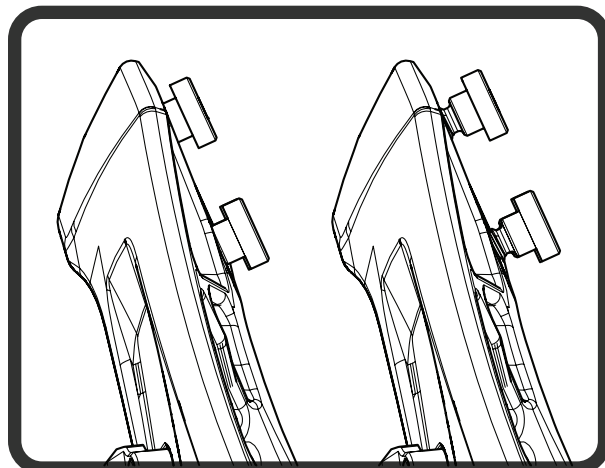

## Warnings

*Max tire size is 2.5". Actual dimensions of tires will vary and clearance between tire and fender must be checked manually.*

*Bolt torque should be checked periodically. Grease may be applied to bolt threads but is not required.*

*This fender is only designed to fit Cane Creek Helm forks and should not be used with any other manufacturer's fork.*

*Only the supplied bolts should be used. Replacement bolts can be sourced through Cane Creek Cycling Components if needed.*

